

INSTALLATION DEVICES



T21 YEALINK VOIP PHONE

USED FOR INTERNAL COMMUNICATION BETWEEN SECURITY, RESIDENTS AND MANagements AS WELL AS EXTERNAL COMMUNICATIONS



FTU (FIBRE TERMINATION UNIT) - OPTIONAL

CONVERTS OPTICAL FIBRE SIGNAL TO RADIO FREQUENCY POWER. ALLOWING DSTV TO WORK OVER FIBRE SIGNAL BY CONNECTING THE REGULAR COAX CABLE.



DSTV SMART SWITCH - OPTIONAL

CONNECTS DSTV EXPLORA TO EXISTING INSTALLATIONS WHERE CUSTOMERS DO NOT MAKE USE OF THEIR OWN SATELITE DISHES.



ONU (OPTICAL NETWORK UNIT)

CONVERTS FIBRE SIGNAL TO ELECTRONIC SIGNALS TO ALLOW YOUR VOIP PHONE TO BE CONNECTED TO A NETWORK.

ONU LED DESCRIPTIONS

SYS	ACTIVITY PASSING THROUGH THE ONU
LAN 1	NETWORK CABLE IS IN AND WORKING.
LINK	FIBRE CABLE IN IN AND WORKING.
LOSS	FIBRE CABLE IS BROKEN OR UNPLUGGED.
PWR	INDICATES POWER TO THE ONU IS ON

HOW TO CONNECT YOUR INTERCOM


1 PLUG POWER ADAPTOR INTO ONU



2 INSERT FIBRE PATCH CABLE INTO OPTICAL FIBRE PORT



3 CONNECT NETWORK CABLE TO THE NETWORK PORT

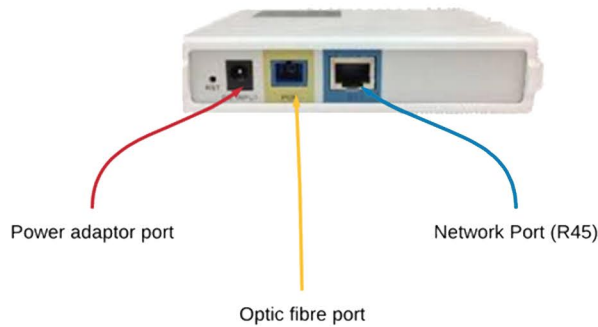

HOW TO CONNECT YOUR VOIP PHONE

4 PLUG POWER CORD OF YOUR VOIP PHONE INTO POWER ADAPTOR



5 CONNECT NETWORK CABLE FROM ONU TO INTERNET PORT IN VOIP PHONE



6 INSERT FIBRE PATCH CABLE FROM ONU INTO THE PC PORT IN YOUR VOIP PHONE

